

# CABEZALES Y ACEITE



Nombre	Código	Potencia hp/kw	caudal lts/min	Presion max	dB(A)	R.P.M.	Volt/Hz	Cilindros	Etapas
<b>COAXIAL SIN ACEITE</b>									
CABEZAL OL 110 AIRUM	<b>9417745</b>	1/0.75	105	8	59	1450	230/MONO/50	1	1
CABEZAL OL 110 NUAIR	<b>9417746</b>	1/0.75	105	8	59	1450	230/MONO/50	1	1
CABEZAL OL 130 NUAIR	<b>9417788</b>	1.3/1	150	8	59	1450	230/MONO/50	1	1
CABEZAL OL 195 NV	<b>A60000N</b>	1.5/1.1	180	8	76	3400	230/MONO/50	1	1
CABEZAL OL 244	<b>B400000</b>	1.5/1.1	130	8	64	1450	230/MONO/50	1	1
CABEZAL OL 150 NUAIR	<b>9417759</b>	2/1.5	240	8	59	1450	230/MONO/50	1	1



Nombre	Código	Potencia hp/kw	caudal lts/min	Presion max	dB(A)	R.P.M.	Volt/Hz	Cilindros	Etapas
<b>COAXIAL CON ACEITE</b>									
CABEZAL HY227	<b>HY0000A</b>	2/1.5	222	10	76	3400	230/MONO/50	1	1
CABEZAL RC-2	<b>9414953</b>	2/1.5	220	8	73	2850	230/MONO/50	1	1
CABEZAL FC-2	<b>9414952</b>	2/1.5	222	8	73	2850	230/MONO/50	1	1
CABEZAL FC2.5	<b>FC0000C</b>	2.5/1.8	250	8	73	2850	230/MONO/50	1	1
CABEZAL VDC	<b>9415216</b>	3/2.2	320	9	73	2850	230/MONO/50	2	1
CABEZAL GVM	<b>3B00000</b>	3/2.2	350	10	71	1450	230/MONO/50	2	1


Nota: los cabezales se suministran sin aceite.



Nombre	Código	Tamaño envase
ACEITE PARA PISTÓN ELAIR 1	<b>ELAIR 1</b>	1 Lt
ACEITE PARA PISTÓN ELAIR 5	<b>ELAIR 5</b>	5 Lt



# CABEZALES

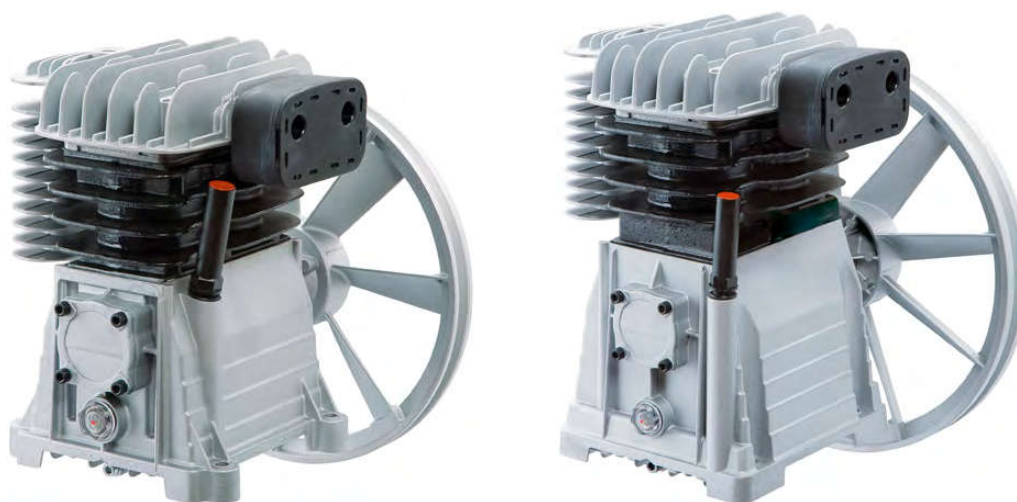

Nombre	Código	Potencia hp/kw	caudal lts/min	Presion max	dB(A)	R.P.M.	Volt/Hz	Volante diámetro	Colector salida	Cilindros	Etapas
<b>CABEZAL MONOETAPA</b>											
<b>CABEZAL B2800</b>	<b>2800000</b>	2/1.5	255	10	72	1250	-	280	No	2	1
<b>CABEZAL B2800B</b>	<b>280000B</b>	3/2.2	330	10	72	1420	-	280	Si	2	1
<b>CABEZAL B3800</b>	<b>3700000</b>	3/2.2	390	10	72	1100	-	350	No	2	1
<b>CABEZAL B3800B</b>	<b>370000B</b>	4/3	480	10	72	1400	-	350	Si	2	1
<b>CABEZAL K17</b>	<b>SD0000A</b>	3/2.2	400	10	72	1100	-	320	No	2	1
<b>CABEZAL K17 C</b>	<b>SD0000B</b>	3/2.2	465	10	72	1350	-	320	Si	2	1

Nota: los cabezales se suministran sin aceite.



Nombre	Código	Potencia hp/kw	caudal lts/min	Presion max	dB(A)	R.P.M.	Volt/Hz	Volante diámetro	Colector salida	Cilindros	Etapas
<b>CABEZAL DOBLE ETAPA</b>											
<b>CABEZAL NB4</b>	<b>N40000A</b>	5.5/4	550	11	73	1480	-	350	Si	2	2
<b>CABEZAL NB5</b>	<b>N50000C</b>	5.5/4	640	11	72	1300	-	398	Si	2	2
<b>CABEZAL NB7</b>	<b>N70001C</b>	7.5/5.5	840	11	72	1250	-	398	Si	2	2
<b>CABEZAL NB10</b>	<b>N10000A</b>	10/7.5	1230	11	72	1250	-	400	Si	2	2
<b>CABEZAL K30</b>	<b>SL0000A</b>	7.5/5.5	872	11	73	1200	-	400	Si	2	2
<b>CABEZAL K50</b>	<b>SM0000A</b>	10/7.5	1274	11	71	1000	-	550	Si	2	2
<b>CABEZAL K60</b>	<b>SN0000A</b>	15/11	1745	11	71	1200	-	550	Si	4-V	2
<b>CABEZAL K100</b>	<b>SP0000A</b>	20/15	2148	11	71	1000	-	550	Si	4-V	2

Nota: los cabezales se suministran sin aceite.